


## Fitting & Operating Instructions

Carefully unwrap the vertical blind and its associated brackets.

There are a number of bracket options for example face fix, top fix, screw fit or spring fit.



Face fix screw fit bracket

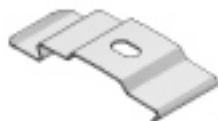

Top fix spring fit bracket

### Fitting the Brackets.

The brackets should be located to allow for the depth of the louvres on the blind. The brackets should therefore be attached to the ceiling or window frame clear from any obstruction on a line 75mm (3") for 127mm louvres or 55mm (2 1/8") in the case of 89mm louvres.

For a blind up to 1 metre wide attach two brackets fitted approximately 40mm (1 1/2") from each end of the blind. Any intermediate brackets should be spaced evenly between these and as a general rule:

- Up to 1m = 2 brackets.
- 1m and 2m = 3 brackets.
- 2m to 3m = 4 brackets.
- Over 3m = 5 brackets.


Mark the bracket hole positions before drilling and plugging if necessary. Use two screws for a face fix bracket and one screw in a top fix bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

### Questions?



0845 652 1963

The logo for 'LOUVOLITE' consists of three vertical bars of varying heights on the left, followed by the word 'LOUVOLITE' in a bold, black, sans-serif font.

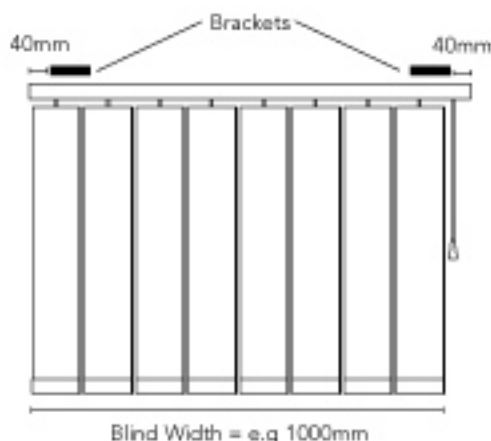

### Fitting the Track.

The track should be fitted into the brackets keeping the operating wand on the side of the blind as ordered (LH/RH control).

If using a face fix screw fit bracket, locate the blind with the groove on the back of the headrail and fit it into the middle lip of the bracket. Now push the blind upwards until the headrail is sitting level on the bracket before tightening the securing screw from the front of the blind. Do not over tighten these screws, it is unnecessary and may damage the track.



If using a top fix spring clip bracket you should push the track upwards then tilt away from you to locate the spring bracket front lip into the front groove on the track. Push upwards and the track will click into place.



## Removing the Track.

Before removing a track first take down all the louvres from the blind and release the cord and chain from the cord tidy.

With brackets that have retaining screws, unscrew the retaining screw sufficiently to clear the groove on the blind track. Repeat this with each bracket and the track will come away.

For spring clip brackets push upwards against the tab at the back of the bracket to release the blind from the bracket. Do this with each bracket and the track will come away.



## Fitting the Louvres

Turn the hooks on the carriers of the track so that the slots are at 90 degrees to the track. Hang the louvres and ensure the seams are all facing the same direction. The blind is now ready to operate.

## CHILD SAFETY

### Tensioned System using double cord tidy.

If the blind is fitted with a continuous loop chain then a cord tidy will be attached to the chain. This must be fitted to the wall as follows.

### Fitting a side fix cord and chain tidy.

The cord tidy is a three piece device with a back plate, a centre piece and a front plate. The space between back and centre pieces will hold the chain and the area between the centre and front plate will hold the cord. The cord tidy will arrive with a red tab fitted to it.