




## How to measure for Vertical blinds

### STEP 1 MEASURING THE WIDTH: Inside recess-

Using a steel tape measure, measure the inside of the recess, this is recess wall to recess wall. You need to do this across the top, middle and bottom of the window recess. see **Fig-A**

### MEASURING THE WIDTH: Outside recess-

If you want your blind to cover the whole of the recess of your window you need to add at least 150mm to you inside recess measurements or just measure to the point you want your blind to cover. See **Fig-B**

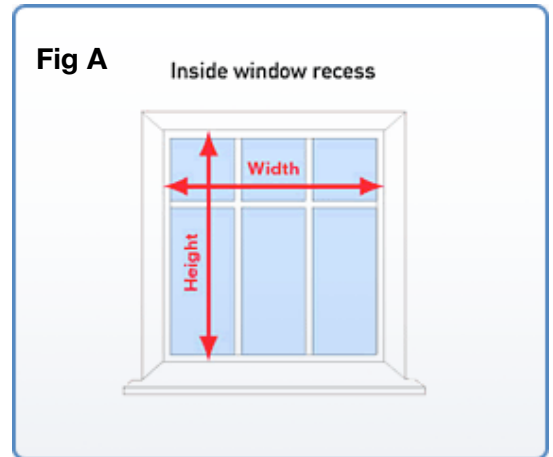


### STEP 2 MEASURING THE DROP: Inside recess-

As above measure from the top of the recess to the window sill. You need to do this across the left, middle and right of the window.

### MEASURING THE DROP: Outside recess-

If you want your blind to cover the whole of the recess of your window you need to add at least 150mm to your inside recess measurements or just measure to the point you want your blind to drop to. See **Fig-B**

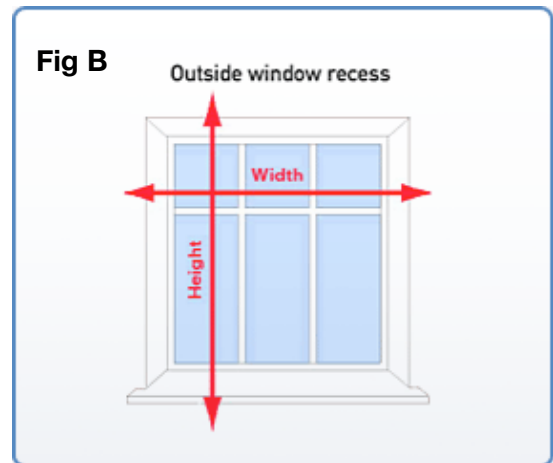

### STEP 3 TAKING YOUR MEASUREMENTS:

Always write down your measurements as 'width and then drop'. On an inside recess measurement use the smallest measurement from your 3 measurements you have taken. This will ensure a perfect fit. Don't forget, the most accurate type of measuring is done in millimetres.

## Questions?



just call us

# Helpful Guides

phone Local rate: 0845 652 1963